



(2)  
Insert pump head to tire valve.




(3)  
Press the lever to lock pump head on tire valve, then inflate.






(4)  
After inflating, press the button to release the pump head.

Made in Taiwan




### 4" DUAL-SCALE GAUGE

35/140PSI

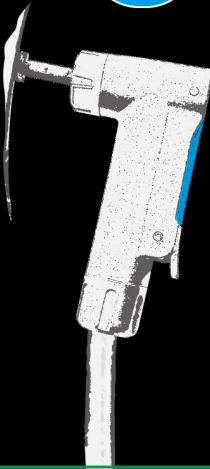




**GF-2242** 4" GAUGE  
35psi / 140psi

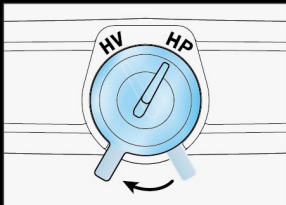- Switch High Volume and High Pressure mode by switch lever on handle top
- Dual-Scale gauge display for Low Pressure and High Pressure
  - » 0~35psi zone: 1psi digit gap, special for FAT tire and MTB
  - » 35~140psi zone: Fit for Road bike tire and Trekking bike
- Clever Valve w/thumb touch lever
- Ball needle and plastic valve stored inside the handle cap.

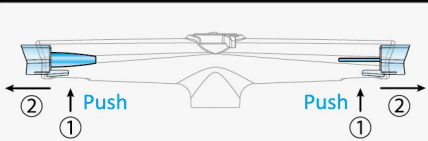


▲ Switch mode for High Volume and High Pressure




▲ Sliding handle plugs with ball needle and valve

**INSTRUCTION**

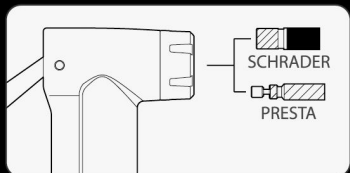

▲ Clever Valve

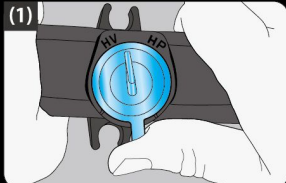

(1)  
Choose High Volume or High Pressure mode.